

Installing the ArtDiffusor® Trim




1. Install Lower Support Board




Install the wood that the Trim will "stand" on. Make sure you install it level and use the studs or drywall anchors for mounting. Countersink screws to provide a flat surface for the facing strip.

2. Install Upper Block

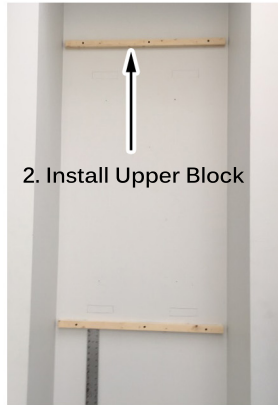

Install the wood block at the top. Make sure it is level and use the same mounting method as the lower blocking. Don't forget to countersink as well.

3. Install the lower facing strip to the lower blocking.

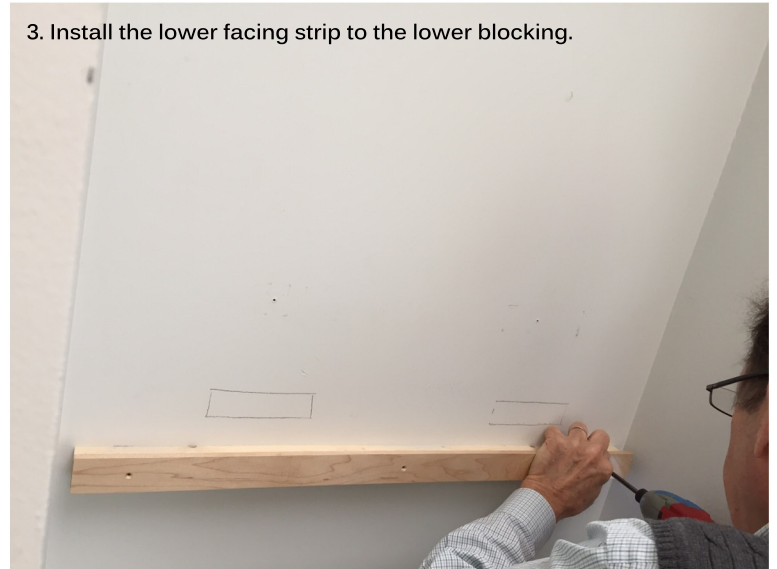

Lower facing strip should be at least 1/2" wider than the block and mounted to lower block. Make sure the 1/2" overlap is on the top. This will create a channel to hold the trim.

4. Fasten Upper Facing Strip at one end.



The lower facing strip should also be at least 1/2" wider than the blocking, but the overlap will be at the bottom. Attach the facing strip at one end to allow you to lift it out of the way to install the Trim.



5. Slide in Trim pieces.

You can use spacers or biscuits in the edge slot to help maintain consistent spacing between the pieces. For this install we used about 1/8" spacing.



6. Fully fasten Upper Facing Strip.

After the pieces are installed and spaced, fasten the other end of the top facing strip to hold the trim. Side blocking may be required for your install.