



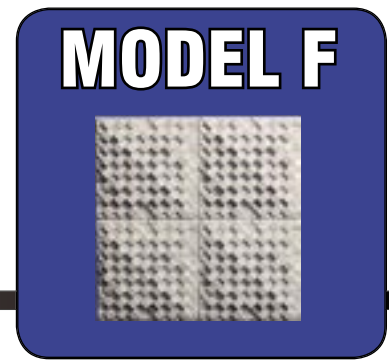


Acoustics First[®]

THE Art **DIFFUSOR**[®]
US PAT. 5160816

INSTALLATION GUIDE

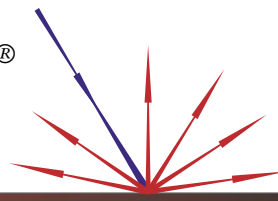

PLAN OF ONE ART DIFFUSOR SQUARE

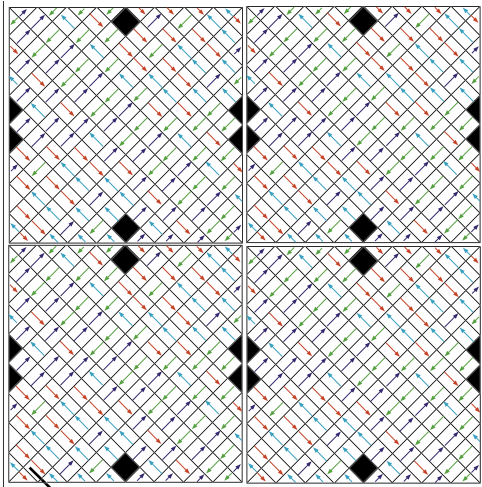


ARROWS INDICATE DIRECTION OF
ELEMENT END CAP ANGLE


USE MINIMUM OF FOUR
3/4" DRYWALL SCREWS
PER DIFFUSOR.

Place a dollop of construction adhesive on all four sides marked by the solid color on the back of the diffuser. Position the diffuser holding the front projecting elements. After aligning with the array, press the diffuser onto wall. Install drywall screws through the zero depth elements from the front for extra support.

TOP

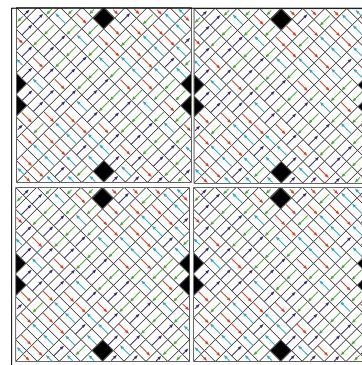

REAR VIEW PLAN

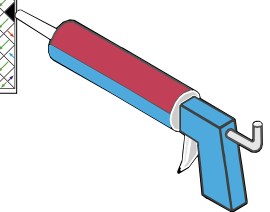

Ceiling Grid:

Simply lay the diffuser into the pre-hung ceiling grid. Always orient panels in the same direction (DO NOT ROTATE PATTERN). For extra ceiling rigidity, diffusers can be clamped into the grid with ceiling tile clips.

Wall or Ceiling Mount, No grid:

Mark diffuser array pattern on wall or ceiling. Use construction adhesive to attach diffuser to surface. Apply adhesive to rear zero depth elements. These have been formed to be flush with the rear plane of the diffuser. Make sure to apply adhesive to all four points of the diffuser. Panels must be held in place while adhesive dries. Install drywall screws through zero-depth elements for optional extra support. Always ensure that the diffusers are aligned consistently. Avoid rotating the pattern within an array.