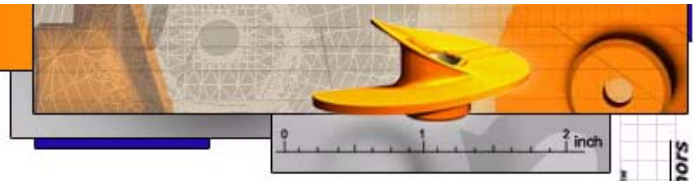

Rotofast Snap-On Anchor

Rotofast Snap-on Anchors are a secure and fast solution for acoustical panel installation. For ceilings or walls, the Rotofast Snap On anchor is the answer.

Installation Instructions

Everything you need to install a panel in **5 EASY STEPS.**

Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast driver tool.

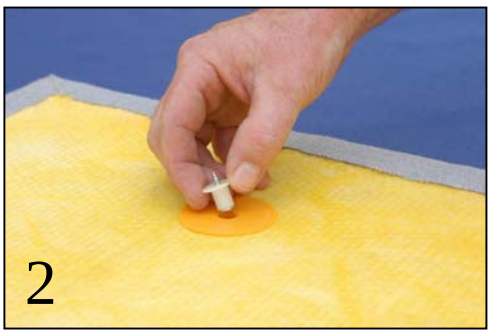

Insert marking plugs into the Snap-On anchors.

Push panel against wall to mark anchor locations.

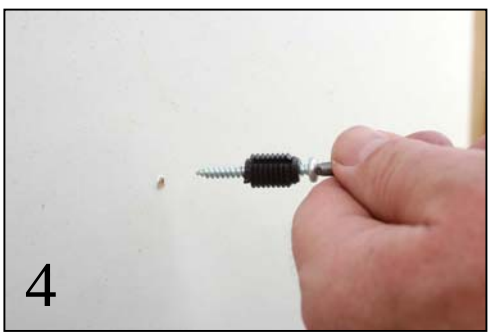

Screw ratchets to wall at marked locations. (#8 screws recommended)

Firmly push panel onto ratchets to complete installation.

AcousticsFirst®
CORPORATION
2247 Tomlyn Street, Richmond, VA 23230
PH: (804) 342-2900 FX: (804) 342-1107
www.AcousticsFirst.com